

Channel Mode: 6CH

CHANNEL	FUNCTION	VALUE	DESCRIPTION	
1	Master Dimmer	0	NO	STROBE MODE IS SET BY STROBE BACKGROUND
		1-255	Dark to Bright	
2	Strobe	0-5	NO	
		6-255	Mode 1: Fast forward and fast out, slow to fast Mode 2: 006-053: Fast forward and Fast out, slow to Fast 054-103: Fast forward and Slow out, slow to fast 104-153: Slow forward and Fast out, slow to fast 154-203: Slow forward and Slow out, slow to fast 204-255: Pulse strobe, slow to fast	
3	Red Dimmer	0	NO	
		1-255	Dark to Bright	
4	Green Dimmer	0	NO	
		1-255	Dark to Bright	
5	Blue Dimmer	0	NO	
		1-255	Dark to Bright	
6	White Dimmer	0	NO	
		1-255	Dark to Bright	
6	Strobe	0	NO	
		1-255	Slow to Fast	

Channel Mode: 9CH

CHANNEL	FUNCTION	VALUE	DESCRIPTION
1	Master Dimmer	0	NO
		1-255	Dark to Bright
2	Strobe	1-255	0-5: Shut Mode 1: Fast forward and Fast out, Slow to fast Mode 2: 006-053: Fast forward and Fast out, Slow to Fast 054-103: Fast forward and Slow out, slow to fast 104-153: Slow forward and Fast out, slow to fast 154-203: Slow forward and Slow out, slow to fast 204-255: Pulse strobe, slow to fast
3	Auto Run Mode	0-255	000-015: Shut; 016-031: Pro 1; 032-047: Pro 2; 048-063: Pro 3; 064-079: Pro 4; 080-095: Pro 5; 096-111: Pro 6; 112-127: Pro 7; 128-143: Pro 8; 144-159: Pro 9; 160-175: Pro 10; 176-191: Pro 11; 192-207: Pro 12; 208-223: Pro 13; 224-239: Pro 14; 240-255: Pro 15;
4	Auto Run Speed	0-99	Jump changes from Slow to Fast
		100-199	Gradual changes from Slow to Fast
		200-255	Sound Mode Sensitivity from Low to High
5	Color Selection	0-255	000-015: Full Color 016-031: R 032-047: G 048-063: B 064-079: W 080-095: RG 096-111: RB 112-127: RW 128-143: GB 144-159: BW 160-175: GW - 176-191: RGB 192-207: RGW 208-223: RBW 224-239: GBW 240-255: RGBW
6	Red Dimmer	0	NO
		1-255	Dark to Bright
7	Green Dimmer	0	NO
		1-255	Dark to Bright
8	Blue Dimmer	0	NO
		1-255	Dark to Bright
9	White Dimmer	0	NO
		1-255	Dark to Bright

STROBE MODE IS SET BY STROBE BACKGR OUND

Channel Mode: 20CH

RING 1

CHANNEL	FUNCTION	VALUE	DESCRIPTION
1	Red	0-255	Red Ring 1 0 - Shut 1 - 255 Dark to Bright
2	Green	0-255	Green Ring 1 0 - Shut 1 - 255 Dark to Bright
3	Blue	0-255	Blue Ring 1 0 - Shut 1 - 255 Dark to Bright
4	White	0-255	White Ring 1 0 - Shut 1 - 255 Dark to Bright

RING 2

5	Red	0-255	Red Ring 2 0 - Shut 1 - 255 Dark to Bright
6	Green	0-255	Green Ring 2 0 - Shut 1 - 255 Dark to Bright
7	Blue	0-255	Blue Ring 2 0 - Shut 1 - 255 Dark to Bright
8	White	0-255	White Ring 2 0 - Shut 1 - 255 Dark to Bright

RING 3

9	Red	0-255	Red Ring 3 0 - Shut 1 - 255 Dark to Bright
10	Green	0-255	Green Ring 3 0 - Shut 1 - 255 Dark to Bright
11	Blue	0-255	Blue Ring 3 0 - Shut 1 - 255 Dark to Bright
12	White	0-255	White Ring 3 0 - Shut 1 - 255 Dark to Bright

RING 4

13	Red	0-255	Red Ring 4 0 - Shut 1 - 255 Dark to Bright
14	Green	0-255	Green Ring 4 0 - Shut 1 - 255 Dark to Bright
15	Blue	0-255	Blue Ring 4 0 - Shut 1 - 255 Dark to Bright
16	White	0-255	White Ring 4 0 - Shut 1 - 255 Dark to Bright

RING 5

17	Red	0-255	Red Ring 5 0 - Shut 1 - 255 Dark to Bright
18	Green	0-255	Green Ring 5 0 - Shut 1 - 255 Dark to Bright
19	Blue	0-255	Blue Ring 5 0 - Shut 1 - 255 Dark to Bright
20	White	0-255	White Ring 5 0 - Shut 1 - 255 Dark to Bright

Channel Mode: 25CH

CHANNEL	FUNCTION	VALUE	DESCRIPTION
1	Master Dimmer	0	NO
		1-255	Dark to Bright
2	Strobe	1-255	0-5: Shut Mode 1: Fast forward and Fast out, Slow to fast Mode 2: 006-053: Fast forward and Fast out, Slow to Fast 054-103: Fast forward and Slow out, slow to fast 104-153: Slow forward and Fast out, slow to fast 154-203: Slow forward and Slow out, slow to fast 204-255: Pulse strobe, slow to fast
3	Auto Run Mode	0-255	000-015: Shut; 016-031: Pro 1; 032-047: Pro 2; 048-063: Pro 3; 064-079: Pro 4; 080-095: Pro 5; 096-111: Pro 6; 112-127: Pro 7; 128-143: Pro 8; 144-159: Pro 9; 160-175: Pro 10; 176-191: Pro 11; 192-207: Pro 12; 208-223: Pro 13; 224-239: Pro 14; 240-255: Pro 15;
4	Auto Run Speed	0-99	Jump changes from Slow to Fast
		100-199	Gradual changes from Slow to Fast
		200-255	Sound Mode Sensitivity from Low to High
5	Color Selection	0-255	000-015: Full Color 016-031: R 032-047: G 048-063: B 064-079: W 080-095: RG 096-111: RB 112-127: RW 128-143: GB 144-159: BW 160-175: GW - 176-191: RGB 192-207: RGW 208-223: RBW 224-239: GBW 240-255: RGBW

STROBE
 MODE IS
 SET BY
 STROBE
 BACKGR
 OUND

Channel Mode: 20CH

RING 1

RING 2

RING 3

RING 4

RING 5

CHANNEL	FUNCTION	VALUE	DESCRIPTION
6	Red	0-255	Red Ring 1 0 - Shut 1 - 255 Dark to Bright
7	Green	0-255	Green Ring 1 0 - Shut 1 - 255 Dark to Bright
8	Blue	0-255	Blue Ring 1 0 - Shut 1 - 255 Dark to Bright
9	White	0-255	White Ring 1 0 - Shut 1 - 255 Dark to Bright
10	Red	0-255	Red Ring 2 0 - Shut 1 - 255 Dark to Bright
11	Green	0-255	Green Ring 2 0 - Shut 1 - 255 Dark to Bright
12	Blue	0-255	Blue Ring 2 0 - Shut 1 - 255 Dark to Bright
13	White	0-255	White Ring 2 0 - Shut 1 - 255 Dark to Bright
14	Red	0-255	Red Ring 3 0 - Shut 1 - 255 Dark to Bright
15	Green	0-255	Green Ring 3 0 - Shut 1 - 255 Dark to Bright
16	Blue	0-255	Blue Ring 3 0 - Shut 1 - 255 Dark to Bright
17	White	0-255	White Ring 3 0 - Shut 1 - 255 Dark to Bright
18	Red	0-255	Red Ring 4 0 - Shut 1 - 255 Dark to Bright
19	Green	0-255	Green Ring 4 0 - Shut 1 - 255 Dark to Bright
20	Blue	0-255	Blue Ring 4 0 - Shut 1 - 255 Dark to Bright
21	White	0-255	White Ring 4 0 - Shut 1 - 255 Dark to Bright
22	Red	0-255	Red Ring 5 0 - Shut 1 - 255 Dark to Bright
23	Green	0-255	Green Ring 5 0 - Shut 1 - 255 Dark to Bright
24	Blue	0-255	Blue Ring 5 0 - Shut 1 - 255 Dark to Bright
25	White	0-255	White Ring 5 0 - Shut 1 - 255 Dark to Bright