

TRON7 channel list				
Mode/Channel			Value	Function
Simple 34CH	Same 17CH	Full 44CH		The selection and collocation of different mode.Simple occupies less channels,Same mode occuppies very few channels,Full is full channel operation
1	1	1		Head 1 Dimmer
			0..255	Dimmer 0%...100%
2	2	2		Head 1 Shutter
			0..31	Shutter Closed
			32..63	Shutter Open
			64..95	Strobe Effect Slow to Fast
			96..127	Shutter Open
			128..159	Pulse-effect in Sequences Slow to Fast
			160..191	Shutter Open
			192..223	Random Strobe Effect Slow to Fast
			224..255	Shutter Open
3	3	3		Head 1 Red
			0..255	0-100% Red Dimmer from Dark to Bright
4	4	4		Head 1 Green
			0..255	0-100% Green Dimmer from Dark to Bright
5	5	5		Head 1 Blue
			0..255	0-100% Blue Dimmer from Dark to Bright
6	6	6		Head 1 White
			0..255	0-100% White Dimmer from Dark to Bright
		7		Head 1 Macro Color
			0..15	No Function
			16..31	Red
			32..47	Green
			48..63	Blue
			64..79	White
			80..95	Red+Green
			96..111	Red+Blue
			112..127	Red+White
			128..143	Green+Blue
			144..159	Green+White
			160..175	Blue+Wtihe
			176..191	R+G+B
			192..207	R+G+B+W
			208..212	2700K
			213..217	3200K
218..222	3500K			

			223..227	5000K
			228..232	5500K
			233..237	6000K
			238..242	6500K
			243..247	7000K
			248..255	8000K
				Head 1 Color Temp
			0..15	No Function
			16..45	Below 3200K
			46..75	3200K - 3500K
			76..105	3500K - 5000K
			106..135	5000K - 5500K
			136..165	5500K - 6000K
			166..195	6000K - 6500K
			196..225	6500K - 7000K
			226..255	7000K - 8000K
				Head 1 Macro Run
			0..15	No function
			16..31	Macro Run 1
			32..47	Macro Run 2
			48..63	Macro Run 3
			64..79	Macro Run 4
			80..95	Macro Run 5
			96..111	Macro Run 6
			112..127	Macro Run 7
			128..143	Macro Run 8
			144..159	Macro Sound 1
			160..175	Macro Sound 2
			176..191	Macro Sound 3
			192..207	Macro Sound 4
			208..223	Macro Sound 5
			224..239	Macro Sound 6
			240..255	Macro Sound 7
				Head 1 Macro Speed
8	8	10	0..255	Macro Speed from Slow To Fast
				Head 1 Pix_Dimmer
9	9	11	0..255	Pix_Dimmer 0%...100%
				Head 1 Pix_Strobe
10	10	12	0..255	Pix_Strobe Speed 0%...100%
				Head 1 Pix_Red
		13	0..255	0-100% Pix_Red Dimmer from Dark to Bright
		14		Head 1 Pix_Green

		14	0..255	0-100% Pix_Green Dimmer from Dark to Bright
		15		Head 1 Pix_Blue
			0..255	0-100% Pix_Blue Dimmer from Dark to Bright
11	11	16		Head 1 Pix_color
			0..0	No Function
			1..15	Red
			16..31	Green
			32..47	Blue
			48..63	Red+Blue
			64..79	Red+Green
			80..95	Green+Blue
			96..111	Red+Blue+Green
			112..127	2700K
			128..143	3200K
			144..159	3500K
			160..175	5000K
			176..191	5500K
			192..207	6000K
			208..223	6500K
			224..239	7000K
240..255	8000K			
12	12	17		Head 1 Pix_Macro
			0..15	No Function
			16..29	Pix Dynamic Scene1
			30..43	Pix Dynamic Scene2
			44..57	Pix Dynamic Scene3
			58..71	Pix Dynamic Scene4
			72..85	Pix Dynamic Scene5
			86..99	Pix Dynamic Scene6
			100..113	Pix Dynamic Scene7
			114..127	Pix Dynamic Scene8
			128..143	Pix Dynamic Scene9
			142..155	Pix Dynamic Scene10
			156..169	Pix Dynamic Scene11
			170..183	Pix Dynamic Scene12
			184..197	Pix Dynamic Scene13
			198..211	Pix Dynamic Scene14
			212..225	Pix Dynamic Scene15
226..239	Pix Dynamic Scene16			
240..255	Pix Dynamic Scene17			
13	13	18		Head 1 Pix_Macro_Speed
			0..255	Slow to Fast

14	14	19		Head 1 Expand Patterns
			0..15	No Function
			16..29	Pix Dynamic Scene1
			30..43	Pix Dynamic Scene2
			44..57	Pix Dynamic Scene3
			58..71	Pix Dynamic Scene4
			72..85	Pix Dynamic Scene5
			86..99	Pix Dynamic Scene6
			100..113	Pix Dynamic Scene7
			114..127	Pix Dynamic Scene8
			128..143	Pix Dynamic Scene9
			142..155	Pix Dynamic Scene10
			156..169	Pix Dynamic Scene11
			170..183	Pix Dynamic Scene12
			184..197	Pix Dynamic Scene13
			198..211	Pix Dynamic Scene14
			212..225	Pix Dynamic Scene15
226..239	Pix Dynamic Scene16			
240..255	Pix Dynamic Scene17			
15	15	20		Head 1 Pix_Foreground dimmer
			0..255	Pix_Expand Patterns Foreground dimmer 0 – 100%. (Foreground Color Share with "Pix_Macro"Channel)
16	16	21		Head 1 Pix_Background dimmer
			0..255	Pix_Expand Patterns Background dimmer 0 – 100%.
17	17	22		Head 1 Pix_Background_color
			0..0	No Function
			1..15	Red
			16..31	Green
			32..47	Blue
			48..63	Red+Blue
			64..79	Red+Green
			80..95	Green+Blue
			96..111	Red+Blue+Green
			112..127	2700K
			128..143	3200K
			144..159	3500K
			160..175	5000K
			176..191	5500K
192..207	6000K			

			208..223	6500K
			224..239	7000K
			240..255	8000K
18	1	23		Head 2 Dimmer
			0..255	Dimmer 0%...100%
19	2	24		Head 2 Shutter
			0..31	Shutter Closed
			32..63	Shutter Open
			64..95	Strobe Effect Slow to Fast
			96..127	Shutter Open
			128..159	Pulse-effect in Sequences Slow to Fast
			160..191	Shutter Open
			192..223	Random Strobe Effect Slow to Fast
			224..255	Shutter Open
20	3	25		Head 2 Red
			0..255	0-100% Red Dimmer from Dark to Bright
21	4	26		Head 2 Green
			0..255	0-100% Green Dimmer from Dark to Bright
22	5	27		Head 2 Blue
			0..255	0-100% Blue Dimmer from Dark to Bright
23	6	28		Head 2 White
			0..255	0-100% White Dimmer from Dark to Bright
				Head 2 Macro Color
			0..15	No Function
			16..31	Red
			32..47	Green
			48..63	Blue
			64..79	White
			80..95	Red+Green
			96..111	Red+Blue
			112..127	Red+White
			128..143	Green+Blue
			144..159	Green+White
			160..175	Blue+Wtihe
			176..191	R+G+B
			192..207	R+G+B+W
			208..212	2700K
			213..217	3200K
			218..222	3500K
			223..227	5000K
			228..232	5500K
			233..237	6000K
			238..242	6500K

			243..247	7000K
			248..255	8000K
		30		Head 2 Color Temp
			0..15	No Function
			16..45	Below 3200K
			46..75	3200K - 3500K
			76..105	3500K - 5000K
			106..135	5000K - 5500K
			136..165	5500K - 6000K
			166..195	6000K - 6500K
			196..225	6500K - 7000K
			226..255	7000K - 8000K
24	7	31		Head 2 Macro Run
			0..15	No function
			16..31	Macro Run 1
			32..47	Macro Run 2
			48..63	Macro Run 3
			64..79	Macro Run 4
			80..95	Macro Run 5
			96..111	Macro Run 6
			112..127	Macro Run 7
			128..143	Macro Run 8
			144..159	Macro Sound 1
			160..175	Macro Sound 2
			176..191	Macro Sound 3
			192..207	Macro Sound 4
			208..223	Macro Sound 5
224..239	Macro Sound 6			
240..255	Macro Sound 7			
25	8	32		Head 2 Macro Speed
			0..255	Macro Speed from Slow To Fast
26	9	33		Head 2 Pix_Dimmer
			0..255	Pix_Dimmer 0%...100%
27	10	34		Head 2 Pix_Strobe
			0..255	Pix_Strobe Speed 0%...100%
		35		Head 2 Pix_Red
			0..255	0-100% Pix_Red Dimmer from Dark to Bright
		36		Head 2 Pix_Green
			0..255	0-100% Pix_Green Dimmer from Dark to Bright
		37		Head 2 Pix_Blue
			0..255	0-100% Pix_Blue Dimmer from Dark to Bright
				Head 2 Pix_color

28	11	38	0..0	No Function
			1..15	Red
			16..31	Green
			32..47	Blue
			48..63	Red+Blue
			64..79	Red+Green
			80..95	Green+Blue
			96..111	Red+Blue+Green
			112..127	2700K
			128..143	3200K
			144..159	3500K
			160..175	5000K
			176..191	5500K
			192..207	6000K
			208..223	6500K
			224..239	7000K
			240..255	8000K
29	12	39		Head 2 Pix_Macro
			0..15	No Function
			16..29	Pix Dynamic Scene1
			30..43	Pix Dynamic Scene2
			44..57	Pix Dynamic Scene3
			58..71	Pix Dynamic Scene4
			72..85	Pix Dynamic Scene5
			86..99	Pix Dynamic Scene6
			100..113	Pix Dynamic Scene7
			114..127	Pix Dynamic Scene8
			128..143	Pix Dynamic Scene9
			142..155	Pix Dynamic Scene10
			156..169	Pix Dynamic Scene11
			170..183	Pix Dynamic Scene12
			184..197	Pix Dynamic Scene13
			198..211	Pix Dynamic Scene14
			212..225	Pix Dynamic Scene15
226..239	Pix Dynamic Scene16			
240..255	Pix Dynamic Scene17			
30	13	40		Head 2 Pix_Macro_Speed
			0..255	Slow to Fast
				Head 2 Expand Patterns
			0..15	No Function
			16..29	Pix Dynamic Scene1
			30..43	Pix Dynamic Scene2

31	14	41	44..57	Pix Dynamic Scene3
			58..71	Pix Dynamic Scene4
			72..85	Pix Dynamic Scene5
			86..99	Pix Dynamic Scene6
			100..113	Pix Dynamic Scene7
			114..127	Pix Dynamic Scene8
			128..143	Pix Dynamic Scene9
			142..155	Pix Dynamic Scene10
			156..169	Pix Dynamic Scene11
			170..183	Pix Dynamic Scene12
			184..197	Pix Dynamic Scene13
			198..211	Pix Dynamic Scene14
			212..225	Pix Dynamic Scene15
			226..239	Pix Dynamic Scene16
240..255	Pix Dynamic Scene17			
32	15	42		Head 2 Pix_Foreground dimmer
			0..255	Pix_Expand Patterns Foreground dimmer 0 – 100%. (Foreground Color Share with "Pix_Macro"Channel)
33	16	43		Head 2 Pix_Background dimmer
			0..255	Pix_Expand Patterns Background dimmer 0 – 100%.
34	17	44		Head 2 Pix_Background_color
			0..0	No Function
			1..15	Red
			16..31	Green
			32..47	Blue
			48..63	Red+Blue
			64..79	Red+Green
			80..95	Green+Blue
			96..111	Red+Blue+Green
			112..127	2700K
			128..143	3200K
			144..159	3500K
			160..175	5000K
			176..191	5500K
192..207	6000K			
208..223	6500K			
224..239	7000K			
240..255	8000K			