

Channel Mode: 1CH

Channel	Function	Value
CH1	Dimmer	000-255: 0-100% dimmer

Channel Mode: 4CH

Channel	Function	Value
CH1	Red	000-255: Red dimmer 0-100%
CH2	Green	000-255: Green dimmer 0-100%
CH3	Blue	000-255: Blue dimmer 0-100%
CH4	White	000-255: White dimmer 0-100%

Channel Mode: 6CH

Channel	Function	Value
CH1	Dimmer	000-255: 0-100% dimmer
CH2	Strobe	000-004: No function
		005-255: Strobe with speed increasing
CH3	Red	000-255: Red dimmer 0-100%
CH4	Green	000-255: Green dimmer 0-100%
CH5	Blue	000-255: Blue dimmer 0-100%
CH6	White	000-255: White dimmer 0-100%

Channel Mode: 10CH

Channel	Function	Value
CH1	Dimmer	000-255: 0-100% dimmer
CH2	Strobe	000-004: No function
		005-255: Strobe with speed increasing
CH3	Red	000-255: Red dimmer 0-100%
CH4	Green	000-255: Green dimmer 0-100%
CH5	Blue	000-255: Blue dimmer 0-100%
CH6	White	000-255: White dimmer 0-100%
CH7	Color temperature	000-004: No function
		005-040: 2800K
		041-076: 3089K
		077-112 3200K
		113-148 4200K
		149-184 5600K
		185-220 7600K
221-255 8000K		

Channel	Function	Value
CH8	Color fading	000-004: No function
		005-255: Color fading
CH9	Color macro	000-004: No function
		005-130: Color jump, speed increasing
		131-255: Color fading, speed increasing
CH10	Dimmer mode	005-005: No function
		006-047: Dimmer mode, Standard
		048-089: Dimmer mode, Stage
		090-131: Dimmer mode, TV
		132-173: Dimmer mode, Architecture
		174-215: Dimmer mode, Theatre
		216-255: Custom dimmer curve