





AERO BEAM 60

DMX CHART:CH12/CH10

Mode/Channel		Value	Function
12	10		
1	1		Pan
		0..255	PAN Movement
2			Pan-fine
		0..255	Fine control of Pan movement
3	2		Tilt
		0..255	Tilt Movement
4			Tilt-fine
		0..255	Fine control of Tilt movement
5	3		Color wheel
		0..7	Open / white
		8..15	Color 1
		16..23	Color 2
		24..31	Color 3
		32..39	Color 4
		40..47	Color 5
		48..55	Color 6
		56..63	Color 7
		64..71	Color 8
		72..79	Color 9
		80..87	Color 10
		88..95	Color 11
		96..103	Color 12
		104..111	Color 13
		112..127	Color 14
		128..189	Forwards rainbow effect from fast to slow
190-193	Color rotation stop		
194..255	Backwards rainbow effect from slow to fast		
6	4		Gobo wheel 1
		0..4	Open
		5..9	gobo 1
		10..14	gobo 2
		15..19	gobo 3
		20..24	gobo 4
		25..29	gobo 5
		30..34	gobo 6
		35..39	gobo 7
		40..44	gobo 8
		45..49	gobo 9
		50..54	gobo 10
		55..59	gobo 11
		60..64	gobo 12
		65..69	gobo 13
		70..74	gobo 14
		75..79	gobo 15
		80..84	gobo 16
		85..89	gobo 17
		90..97	Gobo 1 shake slow to fast
98..105	Gobo 2 shake slow to fast		
106..113	Gobo 3 shake slow to fast		



6	4	114..121	Gobo 4 shake slow to fast
		122..129	Gobo 5 shake slow to fast
		130..137	Gobo 6 shake slow to fast
		138..145	Gobo 7 shake slow to fast
		146..153	Gobo 8 shake slow to fast
		154..161	Gobo 9 shake slow to fast
		162..169	Gobo 10 shake slow to fast
		170..177	Gobo 11 shake slow to fast
		178..185	Gobo 12 shake slow to fast
		186..193	Gobo 13 shake slow to fast
		194..201	Gobo 14 shake slow to fast
		202..209	Gobo 15 shake slow to fast
		210..217	Gobo 16 shake slow to fast
		218..225	Gobo 17 shake slow to fast
226..255	Rot. gobo wheel cont. rotation slow to fast		
7	5		Shutter
		0..31	Shutter closed
		32..63	shutter open
		64..95	Strobe effect slow to fast
		96..127	shutter open
		128..159	Pulse-effect in sequences slow to fast
		160..191	shutter open
		192..223	Random strobe effect slow to fast
224..255	shutter open		
8	6		Dimmer
		0..255	Dimmer 0%...100%
9	7		Focus
		0..255	In(near) to out(far)
10	8		Prism
		0..5	OFF
		6..127	ON
		128..255	Rrotating from slow to fast
11	9		Speed pan/tile
		0..225	max to min speed
		226..235	blackout by movement
		236..245	blackout by all wheel changing
		246..255	no function
12	10		Special function
		0..19	No function
		20..29	No function
		30..39	No function
		40..79	No function
		80..84	All Motor reset
		85..87	Scan motor reset
		88..90	Colors motor reset
		91..93	Gobo motor reset
		94..96	No function
		97..99	Other motor reset
		100..119	Internal program 1
		120..139	Internal program 2
		140..159	Internal program 3
		160..179	Internal program 4
		180..199	Internal program 5
		200..219	Internal program 6
220..239	Internal program 7		
		240..255	Internal Sound program 1

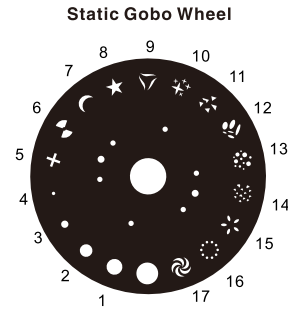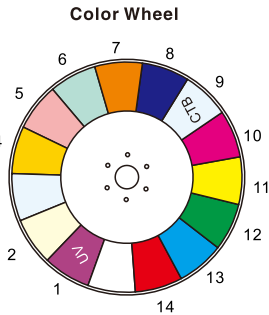

	DMX Value
Color 1	8..15
Color 2	16..23
Color 3	24..31
Color 4	32..39
Color 5	40..47
Color 6	48..55
Color 7	56..63
Color 8	64..71
Color 9	72..79
Color 10	80..87
Color 11	88..95
Color 12	96..103
Color 13	104..111
Color 14	112..127

	DMX Value
Gobo 1	5..9
Gobo 2	10..14
Gobo 3	15..19
Gobo 4	20..24
Gobo 5	25..29
Gobo 6	30..34
Gobo 7	35..39
Gobo 8	40..44
Gobo 9	45..49
Gobo 10	50..54
Gobo 11	55..59
Gobo 12	60..64
Gobo 13	65..69
Gobo 14	70..74
Gobo 15	75..79
Gobo 16	80..84
Gobo 17	85..89

JMAZ LIGHTING

Address: 313 NEWQUIST PLACE STE B, CITY OF INDUSTRY, CA 91745 USA
 Phone: 1-626-380-0883 www.jmazlighting.com support@jmazlighting.com